



Oxford House, Oxford Road, Aylesbury, Buckinghamshire HP21 8SZ  
Issue No.1 5495 05/2007

 **REXEL**



# PROSTYLE STYLE+ STYLE

- Ⓒ USER GUIDE
- Ⓔ MODE D'EMPLOI
- Ⓓ BEDIENUNGSANLEITUNG
- Ⓜ GEBRUIKSAANWIJZING
- Ⓛ BRUKSANVISNING
- Ⓔ GUIDA ALL'USO
- Ⓔ GUIA DEL USUARIO
- Ⓓ MANUAL DO UTILIZADOR
- Ⓓ INSTRUKCJA OBSŁUGI
- Ⓜ ИНСТРУКЦИИ ПО ИСПОЛЬЗОВАНИЮ
- Ⓓ HASZNÁLATI ÚTMUTATÓ
- Ⓒ UŽIVATELSKÁ PŘÍRUČKA
- Ⓜ BRUGERVEJLEDNING
- Ⓓ KULLANIM KILAVUZU
- Ⓒ ΟΔΗΓΟΣ ΧΡΗΣΗΣ
- Ⓓ KÄYTTÖOHJEET
- Ⓓ BRUKERHÅNDBOK



To register and activate  
the warranty go to  
[www.accoeurope.com](http://www.accoeurope.com)

ATTENTION

Fig 1

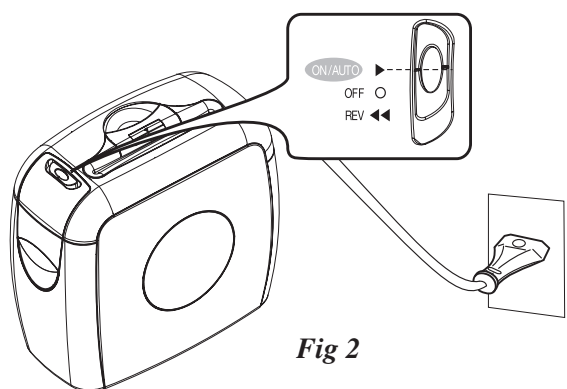 
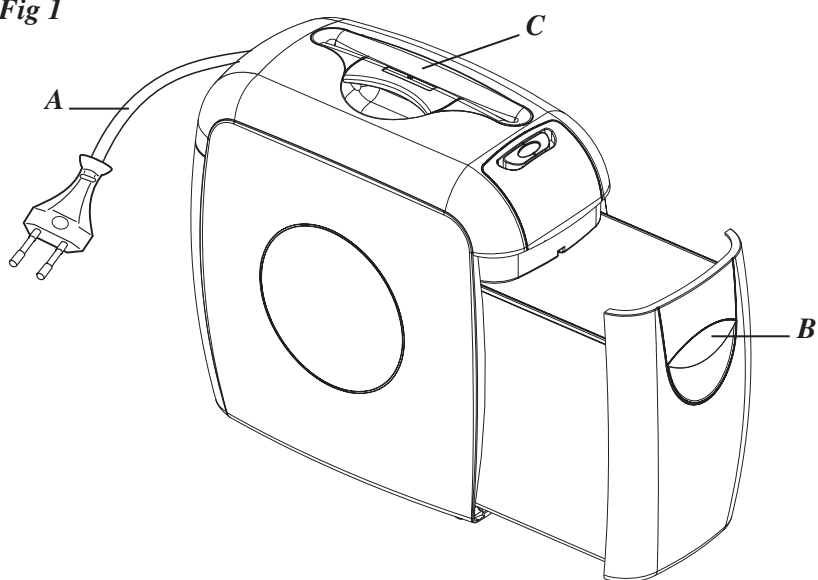 


Fig 2

Fig 4

 
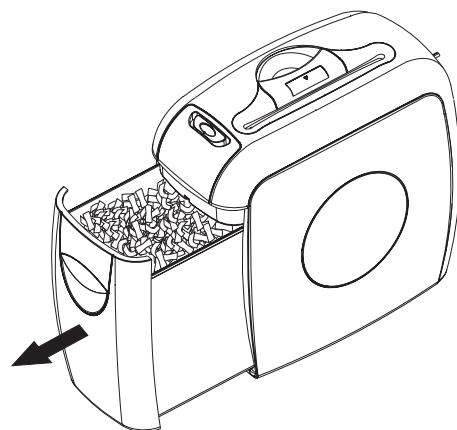 


Fig 3

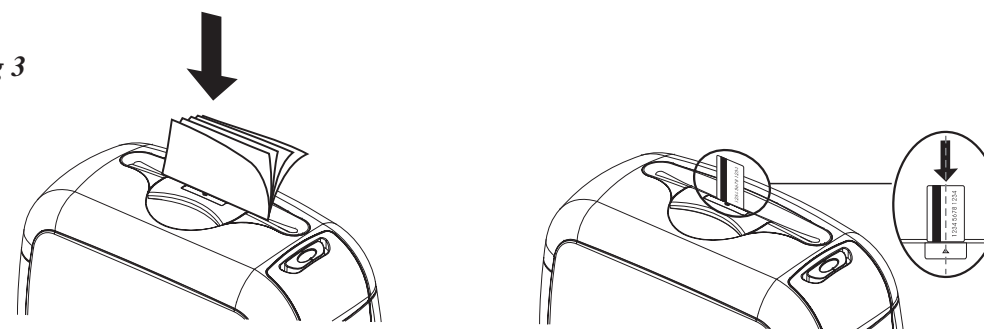

- GB** Do not shred more than the stated sheet capacity at a time.
- F** Lors de l'alimentation des feuilles, ne dépassez pas la capacité de coupe indiquée.
- D** Vernichten Sie nicht mehr als die angegebene Höchstblattzahl pro Durchgang.
- NL** Houd u telkens aan de maximumcapaciteit voor ingevoerde vellen.
- S** Mata inte in mer än angivet antal ark åt gången.
- I** Non distruggere una quantità di fogli per volta maggiore di quella indicata.
- E** No intente triturar más de una tarjeta de crédito a la vez.
- P** Não introduza na máquina de uma só vez um número de folhas de papel superior à sua capacidade.
- PL** Nie wkładaj jednorazowo do niszcarki większej ilości kartek niż wskazana maksymalna liczba.
- RUS** Не разрезайте одновременно более установленного количества листов за один заход.
- H** A megadott lapkapacitásnál többet ne aprítson egyszerre.
- CZ** Nesnažte se skartovat najednou více listů, než je uvedená kapacita
- DK** Makuler ikke mere end den anførte arkkapacitet ad gangen
- TR** Bir seferde belirlilen sayfa kapasitesinden daha fazlasını imha etmeyin
- GR** Μην επιχειρείτε να καταστρέψετε περισσότερα φύλλα χαρτί, κάθε φορά, από τον καθορισμένο αριθμό
- FIN** Älä silppua sallittua suurempaa arkkimäärää kerrallaan
- N** Ikke makuler mer enn oppgitt arkkapasitet om gangen
- GB** Do not attempt to shred more than one credit card at a time.
- F** N'essayez pas de détruire plusieurs cartes de crédit à la fois.
- D** Versuchen Sie nicht, mehr als eine Kreditkarte auf einmal zu vernichten.
- NL** Voer niet meer dan één creditcard in een keer in.
- S** Försök inte riva mer än ett kreditkort åt gången.
- I** Non cercare di distruggere più di una carta di credito per volta.
- E** No intente triturar más de una tarjeta de crédito a la vez.
- P** Não destrua mais de um cartão de crédito de uma só vez.
- PL** Nie wkładaj do niszcarki więcej niż jednej karty kredytowej naraz.
- RUS** Не пытайтесь разрезать более чем одну кредитную карту за один заход.
- H** Egnél több hitelkártyát soha ne aprítson egyszerre.
- CZ** Nesnažte se skartovat najednou více než jednu kreditní kartu
- DK** Forsøg ikke at makulere mere end ét kreditkort ad gangen
- TR** Aynı anda birden fazla kredi kartı imha etmeye çalışmayın
- GR** Μην επιχειρείτε να καταστρέψετε περισσότερες από μια πιστωτική κάρτα κάθε φορά
- FIN** Älä silppua yhtä luottokorttia enempää kerrallaan
- N** Ikke prøv å makulere flere enn ett kredittkort om gangen

## Rexel Prostyle Style+ and Style Instruction Leaflet

GB

Please read this instruction leaflet carefully before use

### Introduction

Thank you for choosing this Shredder from Rexel. We are sure it will serve you well, but please take a little time to read these instructions to ensure you get the best out of your machine.

### Safety First

1. Please store this instruction manual in a safe place for future reference.
2. Please pay close attention to the safety symbols on the top of the shredder and operate the machine accordingly.
3. If the shredder needs cleaning, unplug the unit from the power socket and use a damp cloth. NB. Do not use any cleaning products to clean the unit.
4. Do not position the unit near to an object that radiates heat.
5. Do not place the unit in a damp environment.
6. Take care not to splash any liquid onto the machine.
7. Return the product and proof of purchase with receipt to the store at which it was purchased if...
  - The power cable or plug is broken.
  - The machine malfunctions because liquid was accidentally spilt onto the machine.
  - The shredder doesn't operate despite following the guidelines in the manual.
8. Make sure the power cable isn't a trip hazard.
9. Please ensure the power supply is compatible with the requirements of the machine (220-240V 50Hz).
10. To avoid risk of injury, do not open the machine's casing to attempt DIY repair. Any attempted repair by an unqualified person will invalidate the warranty.

### Description of product parts (fig 1)

- A Power Cable (Euro plug shown)
- B Viewing window
- C Paper entry slot

### Preparation before use

How to use the shredder correctly:

1. Take care not to insert fingers, ties or other objects into the entry slot of the shredder.
2. Try to avoid paper clips, staples, laminating materials, plastic bags etc. from being passed through the shredder. This will prevent damage to the cutters.
3. Do not shred wet paper as it can tangle in the cutters.
4. Do not shred more than the stated sheet capacity in one pass.
5. Do not shred continuously for more than 3 minutes at a time. Running the unit for too long may make the motor overheat. If the motor over heats, allow it to cool down for at least 30 minutes before resuming use.
6. Do not use the "REV" (<|<) (reverse) function if it's not necessary. Over use of the "REV" (<|<) function can result in shredded paper becoming jammed in the entry slot, which will adversely affect the performance of the shredder.

### Correct operating procedure (fig 2)

1. Insert plug into the AC power socket.
2. Check the shredder bin is fully closed.
3. Push the switch to the ON/AUTO position (standby mode)
4. When not in use, push the switch to the O (off position)

### Auto shred and stop

- Place the paper or credit card into the centre of the entry slot - shredding will start automatically (fig 3).
- Paper smaller than A4 in width should be placed in the middle of the entry slot to ensure the shredder works automatically.
- The cutters will stop rotating automatically after finishing shredding
- Do not shred more than the stated sheet capacity at a time.
- If too many sheets are inserted at a time, the shredder can become jammed. If the shredder becomes jammed, switch the button to REV (<|<) position to clear the jam by reversing the paper. If the paper has become so entangled in the cutter that it can't be reversed, turn off the power and pull out the paper by hand. Restart with fewer sheets and feed the non-shredded end of the paper in first.

## Rexel Prostyle Style+ and Style Instruction Leaflet

GB

### CAUTION:

Do not shred continuously for more than 3 minutes. When the motor has overheated, the thermal safety switch will start working automatically. If the thermal switch trips, do not use the machine for about 30 minutes while the thermal sensitive safety switch cools down so the shredder can be safely used again.

### Emptying the pull-out waste bin (fig 4)

Empty the shredder bin when the shredder paper is visible through the viewing window on the side of the pullout bin.

1. Pull out the shredder bin (fully).
2. Empty the shredder bin into a waste sack.
3. Push the shredder bin back in ensuring it is fully closed.

### CAUTION:

- This machine is not a toy. Keep away from children and pets.
- For indoor use only.
- Never insert fingers into the entry slot of the shredder.
- Turn the power off immediately if your hair, tie or sleeve becomes entangled in the shredder.
- The shredder bin must be fully pushed closed for the machine to operate.
- Empty the shredder bin when it is full otherwise the shredder's performance will be adversely affected. Operating the shredder with a full shredder bin can result in paper jamming in the cutters, which will increase the machine's noise level.
- Do not force down shredder paper in the bin using your feet.

### Technical data

Model	Rexel Prostyle	Rexel Style+ (VS714C)	Rexel Style (VS511C)
Cutting Type	Confetti Cut	Confetti Cut	Confetti Cut
Shred Size	4 x 35mm	4 x 23mm	4 x 30mm
Sheet Capacity (one pass)	11 sheets (80 gsm)	7 sheets (80 gsm)	5 sheets (80 gsm)
Entry Width	230mm	230mm	230mm
Product Dimensions	430 x 232 x 410mm	378 x 203 x 360mm	340 x 185 x 320mm
Rated Voltage/Frequency	220-240V~50Hz	220-240V~50Hz	220-240V~50Hz
Rated Current	2A	1.3A	0.8A

If the paper shredder will not start, please check the following:

1. Is the machine plugged in correctly?
2. Is the switch pushed to the 'ON/AUTO' position?
3. Is the machine jammed with paper?
4. Has the motor overheated?
5. Is the shredder bin fully pushed in?

In case of jammed paper, please follow the procedure below:

1. Check if the bin is too full with paper - the bin should be emptied regularly to avoid paper becoming jammed in the cutters.
2. Slide the switch to the 'REV' (<|<) position to reverse the jammed paper.
3. If the paper is so jammed that it will not come out in reverse function, slowly push the switch between 'REV' (<|<) and ON/AUTO. Do not do this too quickly as this can damage the shredder.
4. WARNING - Do not under any circumstances use any metal objects (scissors, letter openers etc.) in an attempt to clear the entry - this model has mains voltage inside the casing, which could cause serious injury.

This machine does not require lubricant. Acco Brands Europe accepts no liability for product performance or safety should any lubricant be used on any part(s) of this machine.

### Warranty

The product is guaranteed for 24 months from the date of purchase - please return the unit to your retailer if you experience any problems. This does not affect your statutory rights.

## Service

- GB ACCO UK Service Division**  
Hereward Rise, Halesowen, West Midlands B62 8AN  
Tel: 0845 658 6600. Fax: 0870 421 5576. [www.acco.co.uk/service](http://www.acco.co.uk/service)
- F ACCO Brands France**  
Service Après-Vente, 8 Rue du Mars 1962, 21601 Longvic, Cedex BP7/ZI.  
Tel: 0820 872 356. Fax: 03 80 68 60 49
- D Acco Deutschland**  
Arnoldstrasse 5, 73614 Schorndorf, Germany  
Tel: +49 7181/887-420. Fax: +49 7181/887-420
- E ACCO Iberia SL**  
**P** Isaac Peral 19, 28820 Coslada (Madrid)  
Tel: 91 669 9391. Fax: +91 672 07 11
- I ACCO Brands Italia Srl**  
Via Pietro Nenni 13, Settimo Torinese (TO)  
Tel: +39 011 8961111. Fax: +39 011 8961113. e-mail: [assistenzaitalia@acco.com](mailto:assistenzaitalia@acco.com)
- B ACCO Brands Benelux B.V.**  
Peppelkade 64, 3992AK Houten, Nederland/Les Pays-Basl.  
Tel: 0800-73362. Fax: 02-4140784. e-mail: [info@accobenelux.be](mailto:info@accobenelux.be) [www.accobenelux.be](http://www.accobenelux.be)
- LUX ACCO Brands Benelux B.V.**  
Peppelkade 64, 3992AK Houten, Nederland/Les Pays-Basl.  
Tel: 0800-21132. Fax: 02-4140784. e-mail: [info@accobenelux.be](mailto:info@accobenelux.be) [www.accobenelux.be](http://www.accobenelux.be)
- NL ACCO Brands Benelux B.V.**  
Peppelkade 64, 3992AK Houten, Nederland/Les Pays-Basl.  
Tel: 030-6346060. Fax: 030-6346070. e-mail: [info@accobenelux.nl](mailto:info@accobenelux.nl) [www.accobenelux.nl](http://www.accobenelux.nl)
- S ACCO Brands Nordic AB**  
**DK** Makadamgatan 5, 254 64 Helsingborg, Sweden  
**N** Tel: +46 42 38 36 00. Fax: +46 42 38 36 10. e-mail: [service.nordic@acco.com](mailto:service.nordic@acco.com)
- IS**  
**LV**  
**EST**  
**LT**
- CZ XERTEC a.s.**  
**SK** U Továrny 770/1b, 102 00 Praha 10, Ceska Republika  
Tel: +420 271 741 800. Fax: +420 271 743 143 [www.xertec.cz](http://www.xertec.cz)

## Service

- PL SERWIS ACCO**  
05-300 Mifsk Mazowiecki, Ul. Grobelnego 4, Polska  
Tel. +48 25 758 11 90. Fax. +48 25 758 11 90
- H ACCO Hungária Kft**  
Budapest, Ócsai út 4., 1239, Hungária  
Tel:+36 1 283 1645. Fax: +36 0 283 0928
- RUS Представительство компании**  
«АККО Дойчланд ГМБХ и КО. КГ», Россия 105005, Москва, Денисовский пер., д.26  
Тел: (495) 933-51-63. Факс: (495) 933-51-64
- UR Полиграфические СИСТЕМЪ**  
03110 Киев, Украина, Пр.Червонозорный, 51, офис 216 лабораторного корпуса НИИ СП  
тел. (+38) 044 495-1293. Факс: (+38) 044 248-4923
- AUS ACCO Australia Pty Ltd**  
Level 2, 8 Lord Street, Botany, NSW, Australia 2019  
Tel: + 61 2 9700 0180. Fax: +61 2 9700 0195. e-mail: [sales.au@acco.com](mailto:sales.au@acco.com)
- A ACCO Österreich**  
Sallmann Birotechnik GmbH, Schumacherstr. 13, 5020 Salzburg  
Tel: 0662 4345 160. Fax: 0662 4345 164. e-mail: [bachinger@sallmann.at](mailto:bachinger@sallmann.at)
- CH ACCO Schweiz**  
ABC Birotechnik AG, Winkelbühl 4, 6043 Adligenswil  
Tel: 041 375 6060. Fax: 041 375 6061. e-mail: [bl@abc-buerotechnik.ch](mailto:bl@abc-buerotechnik.ch)
- IRE ACCO-Rexel Ltd**  
Clonshaugh Business & Technology Park, Clonshaugh, Dublin 17  
Tel: 01 816 4300. Fax: 01 816 4302. e-mail: [information-ie@acco.com](mailto:information-ie@acco.com) [www.accorexel.ie](http://www.accorexel.ie)
- TR Eraysan**  
Beysan Sanayi Sitesi, Fuar Sk. No:17. Haramirede / Buyukcekmece, Istanbul / Turkey  
Tel: +90 212 876 42 40. Fax: +90 212 876 44 13. e-mail: [teknikservis@eraysan.com.tr](mailto:teknikservis@eraysan.com.tr)  
[www.eraysan.com.tr](http://www.eraysan.com.tr)
- IND GBC Asia Pte Ltd**  
**PAK** 47 Ayer Rajah Crescent, #05-08/17, Singapore 139947  
**BD** Tel: +65 6776 0195. Fax: +65 6779 1041. e-mail: [webmaster@gbcasia.com.sg](mailto:webmaster@gbcasia.com.sg)
- JAP GBC-Japan K.K.**  
14F Harmony Tower, 1-32-2 Honcho, Nakano-ku, Tokyo 164-8721  
Tel; (81)-03-5351-1801. Fax; (81)-03-5351-1831. e-mail: [serv@gbc-japan.co.jp](mailto:serv@gbc-japan.co.jp) [www.gbc-japan.co.jp](http://www.gbc-japan.co.jp)